


Trac-A-Rod

Installation Suggestions

All of the DU-BRO Trac-A-Rod Storage Systems work in multiple locations. Some of the most popular installation locations include:

1. **Vertically on a wall**
2. **Horizontally on a wall**
3. **On the ceiling (especially above your boat in the garage or on the ceiling of your boat).**
4. **In your garage, cabin, house, basement, etc.**
5. **On your boat lift above your boat.**
6. **In your pick-up truck* or van.**
7. **In your RV.**
8. **In your small boat (see photo)**

*If installing in a pick-up truck with a cap on the bed, you can drill into the “void space” in the ceiling of the cap without “punching” through entire ceiling. (see image below). Note: Be sure to use screws no longer than the depth of the “void space”. Plus, when pre-drilling your holes, mark your drill bit with masking tape approx. 1/4” from the tip to insure you will not drill through the top (outside layer). If you are concerned or have questions, call our toll-free number between 7 am-3:30 pm central time (US only). (877) 776-3474. Non US customers call: (847) 526-1030.

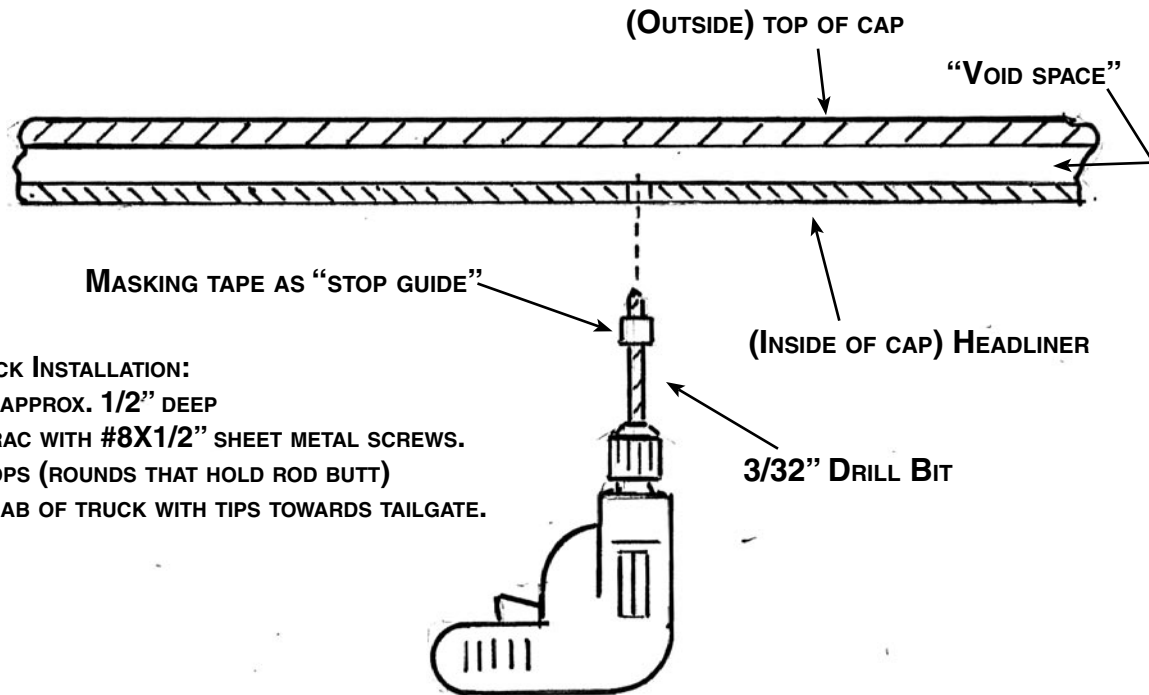

PICK-UP TRUCK INSTALLATION:

1. **PRE-DRILL APPROX. 1/2" DEEP**
2. **SECURE TRAC WITH #8X1/2" SHEET METAL SCREWS.**
3. **INSTAL HOOPS (ROUNDS THAT HOLD ROD BUTT)**
TOWARDS CAB OF TRUCK WITH TIPS TOWARDS TAILGATE.